

BeoRemote One



BANG & OLUFSEN

Contents - Click a headline to move to that section

Daily use

This guide contains additional information about your BeoRemote One and describes features and functions in detail. Among other things you can find information about settings.

Introduction to BeoRemote One and the guide, 3

Using your BeoRemote One, 4

This guide will be updated on a regular basis to make it reflect, for example, new features and functions introduced with software updates.

BeoRemote One in detail, 5

You can find additional information about your product in the Frequently Asked Questions (FAQ) section on www.bang-olufsen.com/customer-service.

Access your favourite content using MyButtons, 7

Make settings for the display, 8

Customise your remote control, 9

Maintenance, 12

Advanced use

Add more products, 13

How to add a product to the BeoRemote One LIST and how to give it a specific Option.

Using BeoRemote One for a 'Beo4' product, 16

How to use BeoRemote One for operation of a Master Link television or music system which is normally operated with Beo4.

Beo4 and BeoRemote One conversion, 19

Find out which button to use on BeoRemote One, if you are used to Beo4.

BeoRemote One advanced settings, 20

Make advanced settings for your remote control. You can, for example, change the display language or reset your BeoRemote One to factory settings.

BeoLink setup, 22

How to display and listen to sources from another Bang & Olufsen product when your products are connected to the same network.

Introduction to BeoRemote One and the guide

The BeoRemote One is a hand-held remote control which gives easy access to remote operation of your Bang & Olufsen television or music system.

The display on BeoRemote shows you sources or functions, such as **TV**, **RADIO** and **STAND**, or even the lights.

The BeoRemote One remote control incorporates more functions than just the actual buttons. Extra sources are brought up on the BeoRemote One display using the **TV** and **MUSIC** button and additional functions can be obtained using the **LIST** button.



Daily operations are carried out by pressing a single button on BeoRemote One, or by pressing a few buttons in a logical and straightforward sequence.

Symbols used in this guide

<i>To turn the television on a motorised stand...</i>	LIST
Press to bring up STAND in the BeoRemote One display	STAND
Press to turn the television stand	or
Select a position for the television to turn to	0 – 9


Example of BeoRemote One operation.

Remote control operation

- A dark grey button, such as **LIST**, indicates a physical button you must press.
- A light grey display text, such as **STAND**, indicates a BeoRemote One display text. Press **LIST**, **TV** or **MUSIC** on BeoRemote One to bring it up. The text appears in the BeoRemote One display. You can show or hide display texts for **LIST**, **TV** and **MUSIC** and you can also rename texts. For more information [see page 9](#) and [page 10](#).
- The **centre** button is symbolised by which is used in the operation sequences when you must press the **centre** button.

Using your BeoRemote One

The BeoRemote One display shows you sources and functions.

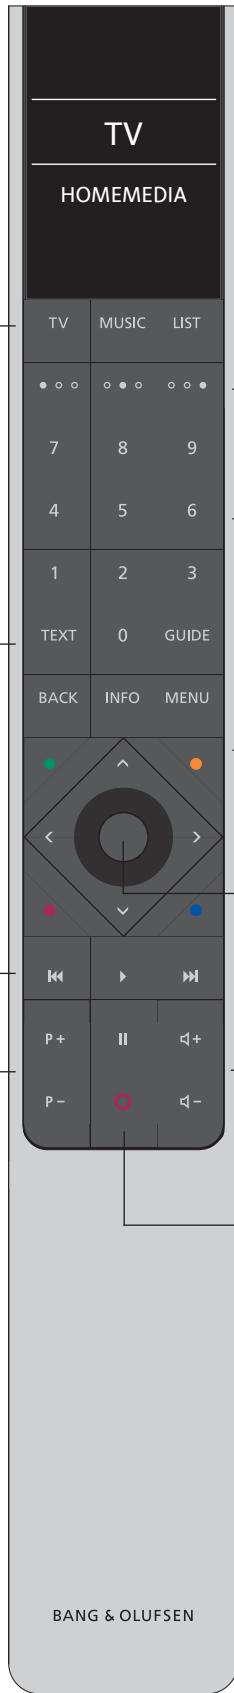

The **TV** button shows a list of TV sources
The **MUSIC** button shows a list of music sources
The **LIST** button shows a list of functions related to the active source

Buttons for functions such as Teletext, Programme Guide and information, and for menu operation of the selected source

Playback buttons and replay

Button for channel and station step

Display text in focus

If the display text fills up more than one line, the text will scroll in from the right in order to display all text when the text is in focus.

The three **MyButtons** are short cuts to the personalisation function

Number buttons

Control buttons for menu operation and for operation of non-Bang & Olufsen products through the Peripheral Unit Controller

Centre button for selection

Button for volume adjustment. To mute, press in the middle of the button, press again to bring back the sound

Standby button

BeoRemote One remote in detail

Daily and advanced operation with BeoRemote One buttons

The buttons on BeoRemote One are conveniently grouped for daily operation.

TV ... displays available TV sources in the BeoRemote One display for you to switch on. Use \wedge or \vee to step in the list and press the **centre** button to switch on a source.

MUSIC ... displays available music sources in the BeoRemote One display for you to switch on. Use \wedge or \vee to step in the list and press the **centre** button to switch on a source.

LIST ... displays extra functions and products in the BeoRemote One display. Use \wedge or \vee to step in the list and press the **centre** button to select an item*. If you exit **LIST** and press **LIST** again within short time, you may need to press **LIST** one more time to display the top of the menu.


MyButtons  ... a long press stores the current setup, such as source, sound and picture settings. A short press selects it. You can also set up the MyButtons to select a specific source only, [see page 7](#).

Number buttons ... 0 through to 9 are used whenever you have to enter numbers, for example to select a specific TV channel or radio station.




Note that You can show or hide display texts for the **TV**, **MUSIC** and **LIST** buttons and you can also rename texts. For more information see [page 9](#) and [page 10](#).

*If you have selected **LIGHT** or **CONTROL** in the **LIST** menu, you must press **LIST** again to access your **LIGHT** and **CONTROL** functions.

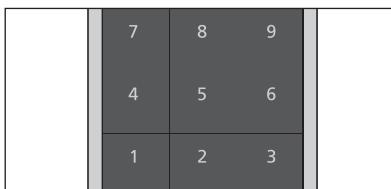

TEXT ... gives access to Teletext on your Bang & Olufsen television.

BACK ... allows you to back up through menus and the BeoRemote One lists. Long press exits all menus and the BeoRemote One lists.

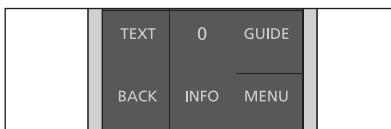

INFO ... brings up help texts or information for a menu or function for your Bang & Olufsen televisions.

GUIDE ... brings up the Programme Guide on your Bang & Olufsen television.

MENU ... brings up the on-screen menus for your Bang & Olufsen televisions.

◀, ▶, ▲ and ▼ ... arrow buttons left, right, up and down allow you to move in menus and in the BeoRemote One display. Use ▲ to return to previous level/item. Use ▶ to open a list of Options or make a selection.




● (Centre button) ... allows you to select or activate a menu or item.

● ● ● (Coloured buttons) ... allow you to select colour specific functions. It will be explained in the guide for your Bang & Olufsen product when and how to use the buttons.

◀◀ and ▶▶ ... search backwards or forwards step by step. The buttons have different functions depending on your Bang & Olufsen television or music system. See the guide for your system for more information.

▶ (Play) ... start playback of a track, file or recording or start replay.

⏸ (Pause) ... pause playback of a programme or recording.

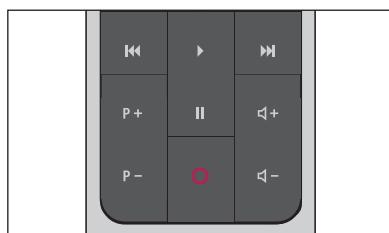

P + /P - ... allows you to step through TV channels and radio stations.

▷+ /▷- ... allows you to adjust the volume up and down. To mute, press in the middle of the button, press again to bring back the sound.

○ (Standby) ... switch your product to standby. Long press switches all products in your system to standby.

Access your favourite content using MyButtons

You can personalise your BeoRemote One, using the three **MyButtons**. You can save a snapshot of a current television viewing or playback experience to be able to restore it quickly with just one touch of a button. For more information, see the guide for your television.

You can also dedicate a source to one of the **MyButtons**, and use it to switch on the source directly.

Note that not all products support the MyButton function. For more information, see the guide for your product.

Save and use a snapshot

You can save up to three snapshots which can be activated by the three **MyButtons**. Your television must be switched on and a source must be selected. A snapshot includes the settings made for the selected source, for example, stand positions and sound adjustment.

To save a snapshot ...

Press and hold one of the **MyButtons** to save the current viewing or playback experience



If you save a snapshot with a button where a snapshot has already been saved, the existing snapshot will be replaced by the new snapshot.



*Use the **MyButtons** to access your favourite content with one touch of a button.*

To use a snapshot ...

Press the button dedicated for the desired snapshot

 


If the item saved as a snapshot is no longer available, the snapshot will still be restored, but the item played will follow normal source behaviour for the selected source.


Use a MyButton for a specific source

You can select a source you want to activate each time you press one of the three **MyButtons**.

To set up a MyButton for a specific source ...
Press to bring up Settings in the BeoRemote One display



Press to bring up Advanced

 

Press to bring up Buttons



Press to select one of the MyButtons



Press to step in the list of sources*¹



Press to store the source you want to activate with the MyButton



¹*Select **MyButton** in top of the list if you want to use the button to save a snapshot, instead. This function is not available when you use BeoRemote One for operation of a 'Beo4' product.

Make settings for the display

BeoRemote One display settings

You can change the settings for display time out^{*1} and for display brightness^{*1} on your BeoRemote One.

Change the display time out ...

Press to bring up Settings in the BeoRemote One display



Press to bring up Display



Press to select Time out



Press to step between the settings for display time out



Press to store the setting



Set the display brightness ...
Press to bring up Settings in the BeoRemote One display



Press to bring up Display




Press to bring up Brightness




Press to step between the settings for display brightness



Press to store the setting

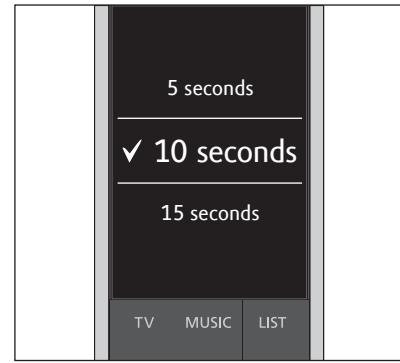

From the factory the display time out is 10 seconds.

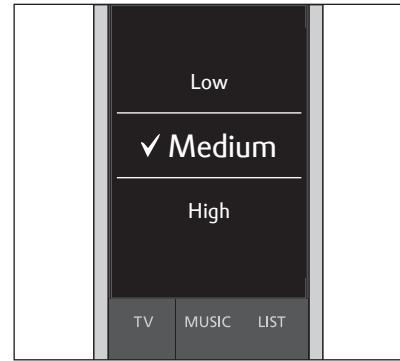

From the factory the display brightness is Medium.

Customise your remote control

The BeoRemote One distinguishes between two main types of sources for the product you operate. The **TV** button allows you to access TV sources and the **MUSIC** button allows you to access music sources. If your products are connected in a BeoLink setup, you can also access linked sources (marked with a link symbol ) if available. For more information about linked sources, [see pages 22-24](#).

The sources available depend on your product and your setup. The **LIST** button relates to the source you have selected.

You can press the **LIST** button to bring up extra functions in the display to help you operate the active source, just as if you were bringing up extra buttons.

You can customise a BeoRemote One to suit your product. You can show/hide and rename sources or functions for the **TV**, **MUSIC** and the **LIST** buttons related to each main source and change the order in which sources and extra functions appear when you bring them up.

Show/hide sources or functions

You can show or hide sources to be listed when pressing the **TV** button and **MUSIC** button for the product you operate. You can also show or hide functions for the **LIST** button related to TV and MUSIC sources.

Note that, if all sources are hidden, no sources are available when pressing the **TV** or **MUSIC** button.

To show/hide sources or functions for the TV, MUSIC or LIST buttons ...

Press to bring up **Settings** in the BeoRemote One display



Press to select the list you want to edit, TV sources, MUSIC sources, LIST for TV or LIST for MUSIC



Press to select Show



Press to select the source or function to show or hide



Press to switch between show ✓ or hide (no selection)



Continue with the next source or function to show or hide.
Or ...



... press to back up through previous menus, or press and hold to exit the menu completely



 
You can add one or more items to be shown in the BeoRemote One lists.

Rename sources or functions

You can rename the sources to be shown when pressing the **TV** button and **MUSIC** button. You can also rename functions for the **LIST** button dedicated to each source, **LIST for MUSIC** and **LIST for TV**. Note, however, that you cannot rename the **Settings** menu.

*To rename a source or function*¹ for the **TV**, **MUSIC** and **LIST** buttons ...*

Press to bring up **Settings** in the BeoRemote One display



Press to access the list of sources or functions to rename, **TV** sources, **MUSIC** sources, **LIST** for **TV** or **LIST** for **MUSIC**



Press to bring up **Rename**



Press to select the source or function*¹ to rename*², such as **WEBMEDIA**



Press to step between characters*³ and the icons at the end of spelling line*⁴. Or, ...



... press to step in the predefined list of names



Press to select a character, number*⁵ or symbol*⁶ or a name from the predefined list



Press to delete*⁴ the last character, number or symbol or press and hold to remove all text




Press to find the store icon **✓** to store the name



¹*If you want to rename a product instead, press **LIST** to bring up **Settings**. Select **Advanced** and bring up **Products**. Follow instructions to rename your product.

²*When you rename a source in BeoRemote One, it may be a good idea to rename the source in the television or music system as well, if possible.

³*You can only use latin characters for naming sources or functions. If a character contains special symbols, you can press **MENU** while the character is highlighted to access a list of special characters to select.

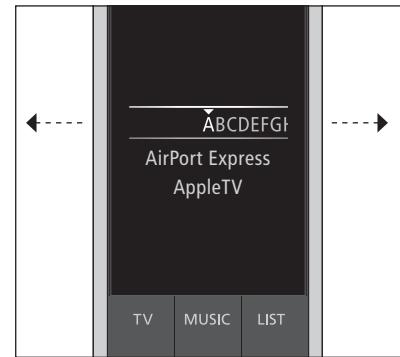

⁴*Use the icons at the end of the spelling line to switch between upper case/lower case **Aa**, to access numbers **123**, symbols **#+=**, delete **☒** and store **✓**.

⁵*You can also enter numbers using the BeoRemote One number buttons **0** to **9**.

Move sources or functions

You can change the order in which the listed sources appear when pressing the **TV** button and **MUSIC** button for the product you operate. You can also move functions for the **LIST** button dedicated to each source, **LIST for MUSIC** and **LIST for TV**. Note, however, that you cannot move the Settings menu, which is always placed at the bottom of the list.

*To move a source or function*¹ for the TV, MUSIC and LIST buttons ...*

Press to bring up **Settings** in the BeoRemote One display



*Move the list behind the selected item ✓, and use the **centre** button to place the item in the list.*

Press to access the list of sources or functions to move, TV sources, MUSIC sources, LIST for TV or LIST for MUSIC



** If you want to move a product instead, press **LIST** to bring up **Settings**. Select **Advanced** and bring up **Products**. Follow instructions to move your product. Note, however, that the active product is always placed in top of the **LIST**.*

Press to bring up **Move**



Press to select the source*¹ or function to move, such as **WEBMEDIA**



Press to move the list behind the selected item ✓




Press to place the item in the list



Continue with the next source or function to move. Or ...



... press to back up through previous menus, or press and hold to exit the menu completely

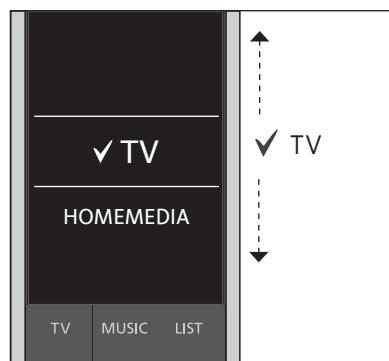

Maintenance

Changing the batteries of BeoRemote One

When the battery warning appears in the BeoRemote One display, it is time to change the batteries in the remote control.

The BeoRemote One requires two batteries. We recommend that you use 1.5 volt (size AAA) batteries only.

Replace the batteries as shown in the Quick guide enclosed with your BeoRemote One or www.bang-olufsen.dk/support/beo-remoteone.pdf.



When the battery warning appears in the display you cannot use the display related functions until you have changed the batteries.

Cleaning BeoRemote One

Wipe the BeoRemote One remote control with a soft, lint-free, wet cloth which is wrung firmly.

Note! Never use alcohol or other solvents to clean any part of the remote control!

Add more products

From the factory BeoRemote One is set up for use with a television (BeoVision) only.

If you want to use BeoRemote One with a new type of Bang & Olufsen product or if you want to use the same BeoRemote One to operate more than one product, the product must be shown in the BeoRemote One LIST for you to select it.

The products you operate with BeoRemote One are divided into three types:

- Televisions
(default BeoVision):
8 different product Options
- Music systems
(default BeoSound):
8 different product Options
- 'Beo4' products*¹ (default
Beo4 VIDEO, Beo4 AUDIO etc.):
4 different product Options

The Option settings allow your BeoRemote One to operate your products individually. If, for example, you have two televisions in the same room and commands from your BeoRemote One can be received by both, you must set up each of the televisions as an individual product, and set it to the correct Option.

The settings you make for your BeoRemote One are saved for the active product. To find out how to switch to another product, [see page 15](#).

Note! If a Network Link product is intended for operation with Beo4, you must set it up as a 'Beo4' product instead. For more information, [see pages 16-18](#).

Step 1 – Add or remove a product in the LIST

In order for BeoRemote One to operate a new product, you must first add the product to the BeoRemote One LIST for you to select it.

Then you must set up the product to a specific Option in the **Product Option** menu for BeoRemote One to recognise it as an individual product, [see page 14](#).

To add or remove a product found via the LIST button ...

Press to bring up Settings in the BeoRemote One display



When you have added a product to the LIST, you always find the active product in the top when you press LIST.

Press to bring up Advanced



**For information about how to use and operate a 'Beo4' product with BeoRemote One, [see pages 16-18](#).*

Press to select Products



Note that you can rename a product or change the order in which it appears when you bring it up via the LIST button. This is done in the same way as sources or functions are renamed or moved for the TV, MUSIC and LIST buttons, [see page 10](#) and [page 11](#).

Press to select Show



Press to select the product to show or hide, such as BeoVision(2)




Press to switch between show ✓ or hide (no selection)



Continue with the next product to show or hide. Or ...



... press to back up through previous menus, or press and hold to exit the menu completely

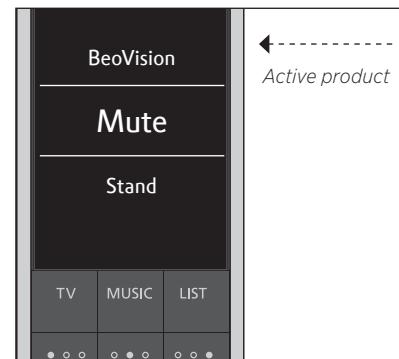

Step 2 – Set up your product to the correct Option

If you use BeoRemote One for a new product or for two or more products of the same type, for example, two televisions and commands from BeoRemote One can be received by both products, BeoRemote One must be able to recognise your products individually. Therefore, you must set up your product to one of the different product Options using the **Product Option** menu.

Depending on your setup, you can select whether or not you want the product to react to commands from your BeoRemote One.

For information about which Option to use, see the guide for your television or music system.

Note! If a Network Link product is intended for operation with Beo4, you must set it up as a 'Beo4' product instead. For more information, [see pages 16-18](#).

To give your product a specific Option using BeoRemote One ...

Point your remote control at the IR-receiver of the product you want to Option programme. The distance between the remote control and the IR-receiver must be maximum 0.5 metres.

Press to bring up **Settings** in the BeoRemote One display



Press to bring up **Advanced**



Press to bring up **Product Option**



Select if you want the product to be IR responsive or IR blind*¹



Select the active product, such as BeoVision



Select a product Option*² for your product, such as BeoSound



Select **Send** and press the centre button to store the selected Option



¹* Select **IR responsive** when you want your product to react to commands from your BeoRemote One and **IR blind** when you do not want your product to react to remote control commands.

²* In order to show the product Option, such as **BeoSound**, in the BeoRemote One display when you press **LIST**, you must add it to the BeoRemote One **LIST**, [see page 13](#).

Switch between products using BeoRemote One

Normally, you can activate a source, such as TV, by pressing **TV** or **MUSIC** and finding the relevant source on your remote control. However, when you have more products, you must select the product before you can operate its sources. You switch between the products via **LIST**.


To switch between products ...

Press to bring up the current product, such as **BeoVision**, in the BeoRemote One **LIST**




Select the desired product*, for example, **BeoVision(2)** for a Network Link television, or **Beo4 AUDIO** for a 'Beo4' music system

Press and select a source, such as **YOUTUBE**

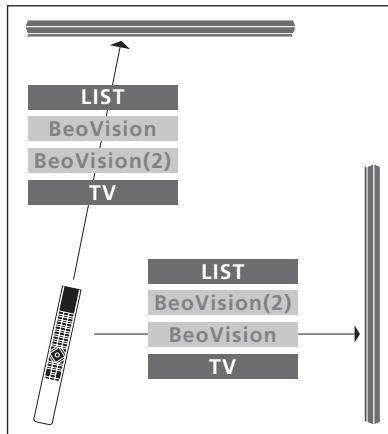

Example of remote control operation when you switch from one television with Network Link to another.

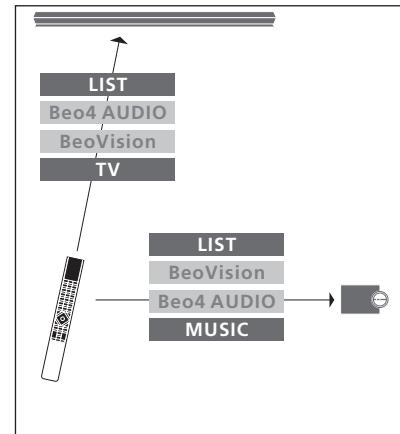

Example of remote control operation when you switch between a television with Network Link and a music system with Master Link.

*To bring up your product, such as **BeoVision(2)** in the BeoRemote One display, you must first add it to the BeoRemote One **LIST**, [see page 13](#).

Using BeoRemote One for a ‘Beo4’ product

You can use BeoRemote One for operation of a Master Link television or music system, which is normally operated with Beo4. The product must be shown in the

BeoRemote One **LIST**, to select it. When a ‘Beo4’ product is selected, the BeoRemote One **LIST** contains the same functions as you find in the Beo4 **LIST**. However, you cannot select sources via **LIST**. To find out how to use BeoRemote One if you normally use Beo4, [see page 19](#).

In order to operate your ‘Beo4’ product with BeoRemote One, you must set it to the correct Option, [see page 17](#).

When you use BeoRemote One to operate a ‘Beo4’ product, the three **MyButtons** are dedicated to the buttons corresponding to the **DTV**, **DVD** and **CD** buttons on Beo4. You can change this at any time and dedicate the three **MyButtons** to activate another source directly, [see page 18](#). However, when you use BeoRemote One for operation of a ‘Beo4’ product, you cannot use the **MyButtons** to save a snapshot of a current viewing or playback experience.

You can also activate a specific source when you press the **TV** and **MUSIC** button, when BeoRemote One is used for operation of a ‘Beo4’ product, [see page 18](#).

For information about how to switch from a ‘Beo4’ product to another type of product, [see page 15](#).

Step 1 – Add or remove a ‘Beo4’ product in the **LIST**

When you want to use BeoRemote One to operate a ‘Beo4’ product, you must first add the product to the BeoRemote One **LIST**.

Then you must set up the product to the correct Option, [see page 17](#).

Note that you can also rename a product or change the order in which it appears when you bring it up via the **LIST** button. This is done in the same way as sources or functions are renamed or moved for the **TV**, **MUSIC** and **LIST** buttons, [see page 10](#) and [page 11](#).

*To add or remove a ‘Beo4’ product found via the **LIST** button ...*

Press to bring up **Settings** in the BeoRemote One display



Press to bring up **Advanced**



Press to select **Products**



Press to bring up **Show**



Press to select the ‘Beo4’ product to show or hide. Options are: Beo4 AUDIO, Beo4 VIDEO, Beo4 AV or Beo4 LINK

Press to switch between show **▼** or hide (no selection)




Continue with the next product to show or hide. Or ...



... press to back up through previous menus, or press and hold to exit the menu completely

BACK

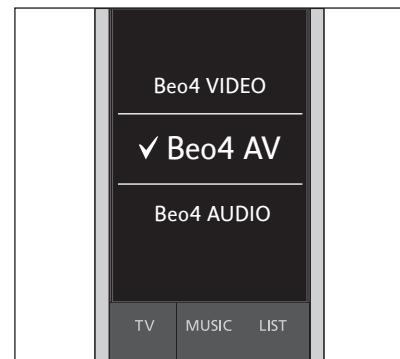

Select one of the four ‘Beo4’ products, Beo4 VIDEO, Beo4 AV, Beo4 AUDIO, or Beo4 LINK:

- Beo4 VIDEO is used for a ‘Beo4’ television in Option 1 or 5.
- Beo4 AV is used for a ‘Beo4’ television in Option 2 or 6.
- Beo4 AUDIO is used for a ‘Beo4’ music system in Option 1, 2, 5 or 6.
- Beo4 LINK is used for the second ‘Beo4’ product, when two televisions or music systems are placed in the same room.


Note! If a Network Link product is intended for operation with Beo4, you must set it up as a ‘Beo4’ product instead.

Step 2 – Set up your 'Beo4' product to the correct Option

When you use BeoRemote One for a 'Beo4' product, the Product Option menu is adapted to match the Option settings available with your Beo4 remote control.

To Option programme a 'Beo4' product using BeoRemote One ...

Point your remote control at the IR-receiver of the product you want to Option programme. The distance between the remote control and the IR-receiver must be maximum 0.5 metres.

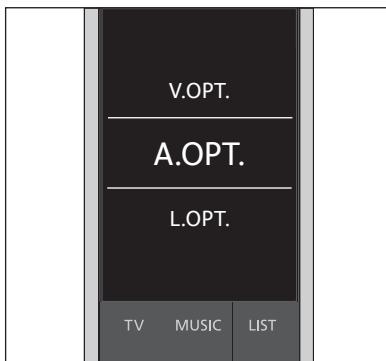

Press to bring up the current product, such as BeoVision, in the BeoRemote One LIST



Select one of the three 'Beo4' Options, V.OPT., A.OPT. or L.OPT.. For information about which Option to use, see the guide for your television or music system.

Select the product*¹ that you want to Option programme, such as Beo4 LINK



Press to bring up Settings



Press to bring up Advanced



Press to bring up Product Option



Select the appropriate Option:
V.OPT., A.OPT. or L.OPT.



Enter the appropriate number
(0, 1, 2, 4, 5 or 6)



Set up the MyButtons and the TV or MUSIC button for a specific source

 
When you use BeoRemote One to operate a 'Beo4' product, the three **MyButtons** are dedicated to the buttons corresponding to the **DTV**, **DVD** and **CD** buttons on Beo4. You can change this at any time and select which source you want to activate each time you press one of the three **MyButtons**.

You can also dedicate a source to the **TV** or **MUSIC** button and use each button to activate a TV or MUSIC source directly.

*Note that you cannot use the **MyButtons** to save a snapshot of a current television viewing or playback experience when you use BeoRemote One for operation of a 'Beo4' product.*

*To set up the **MyButtons** and the **TV** or **MUSIC** button for activating a specific source ...*

Press to bring up **Settings** in the BeoRemote One display



Press to bring up **Advanced**



Press to bring up **Buttons**




Select between the three **MyButtons**, the **TV** or **MUSIC** button



Press to step in the list of sources*¹



Press to store the source you want to activate with the selected button

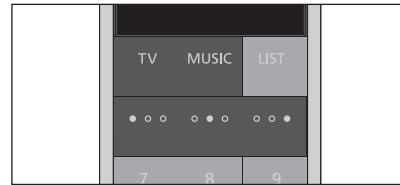

*Set up the **MyButtons** and the **TV** and **MUSIC** button to activate a source directly.*

When you have selected the **TV or **MUSIC** button, you can choose **None** if you do not want the **TV** or **MUSIC** button to activate a specific source.*

Beo4 and BeoRemote One conversion

If you are used to operate your product with Beo4, below conversion helps you find out which button to use on your BeoRemote One when you operate a 'Beo4' product. BeoRemote One buttons are marked with blue. The buttons which have exactly the same function on Beo4 and BeoRemote One are light grey.

TV: ... use the **TV** button on BeoRemote One. This also displays a list of TV sources

V.MEM: ... Press **TV** to bring up TV sources and find **V.MEM** in the BeoRemote One display

A.MEM: Press **MUSIC** to bring up music sources and find **A.MEM** in the BeoRemote One display

LIST: ... press **LIST** on BeoRemote One. The **LIST** contains the same functions as Beo4. Note that you cannot select sources via **LIST**, use the **TV** and **MUSIC** buttons instead.

STOP: ... press **II (Pause)** on BeoRemote One.

*Note! The **INFO** and **GUIDE** buttons have no function when you operate a 'Beo4' product with BeoRemote One.*



LIGHT: ... press **LIST** and find **LIGHT** in the BeoRemote One **LIST**.

RADIO: ... use the **MUSIC** button on BeoRemote One. This also displays a list of music sources.

DTV, DVD, and CD: ... use the **MyButtons*** on BeoRemote One.


DTV: ● ○ ○, **DVD:** ○ ● ○ and **CD:** ○ ○ ●

Navigation button: ... use the arrow buttons <, >, ^, and ^ on BeoRemote One.

Search backwards or forwards: ... use << and >> on BeoRemote One.

▲ and ▼: ... use P + / P - on BeoRemote One.

PLAY: ... use ▶ (Play) on BeoRemote One.

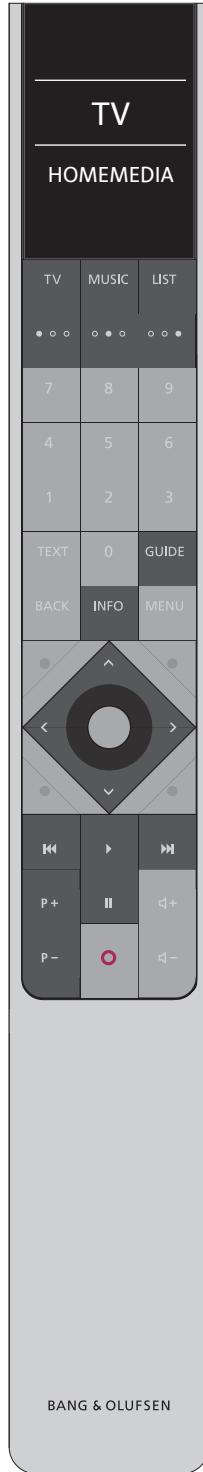

*You can change this at any time and dedicate the three **MyButtons** to activate another source directly, [see page 18](#).

BeoRemote One advanced settings

You have access to make more advanced settings of your BeoRemote One from the **Advanced** menu. You can, for example, change the display language and you can reset your BeoRemote One to factory settings. You can also, set the IR strength if you use BeoRemote One to operate more than one 'Beo4' product.

If you use your BeoRemote One for operation of lights, curtains or blinds you can make settings for this in the **LIGHT** and **CONTROL** menus. This may require a supported Home Automation System. Contact your Bang & Olufsen retailer for more information.

Set the language of your BeoRemote One

You can change the display language of your BeoRemote One at any time. Once a language is chosen, all menus and display messages are shown in this language.

Note however, that to rename sources or functions, you can only use latin characters.

*If by accident, you have chosen a language you do not want, you can enter the language menu by pressing **LIST**, then press the arrow button up \wedge one step and press the **centre** button. Repeat the procedure twice.*

*To set the language of BeoRemote One ...
Press to bring up Settings in the BeoRemote One display*



Press to bring up Advanced

Press to bring up Language

Press to step between languages

Press to select the language you want to use

Reset your BeoRemote One

You can reset your BeoRemote One to factory settings.

To reset your BeoRemote One ...

Press to bring up Settings in the BeoRemote One display



Press to bring up Advanced




Press to bring up Factory reset



You will be asked to confirm the reset. Press to confirm the reset or, ...

... press and hold to exit the menu without resetting

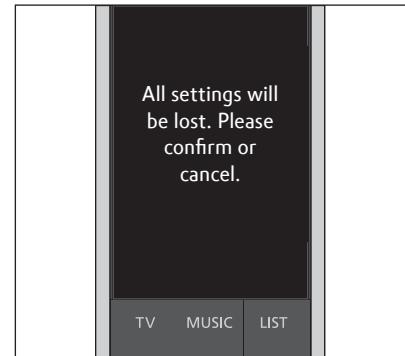

*To confirm the reset press the centre button or press **BACK** to cancel.*

Note! When you reset all settings you have made for your BeoRemote One will be deleted.

Set the IR strength of BeoRemote One

You can set up the IR strength of your BeoRemote One. If, for example, you use BeoRemote One for several 'Beo4' products and they are placed in close proximity, you can reduce the IR strength of the remote control.

To set the IR strength of BeoRemote One ...

Press to bring up Settings in the BeoRemote One display



 
Press to bring up Advanced



Press to bring up IR strength



Press to step between the settings for IR strength




Press to store the setting



BeoLink setup

When you use BeoRemote One for operation of more products and the products are connected to the same network, you can access sound from sources of the other products in the network. The products can be placed in the same or separate rooms. For more information about how to connect and set up your product, see the guide for your television or music system.

A TV with Network Link and a music system with Master Link in the same or separate rooms

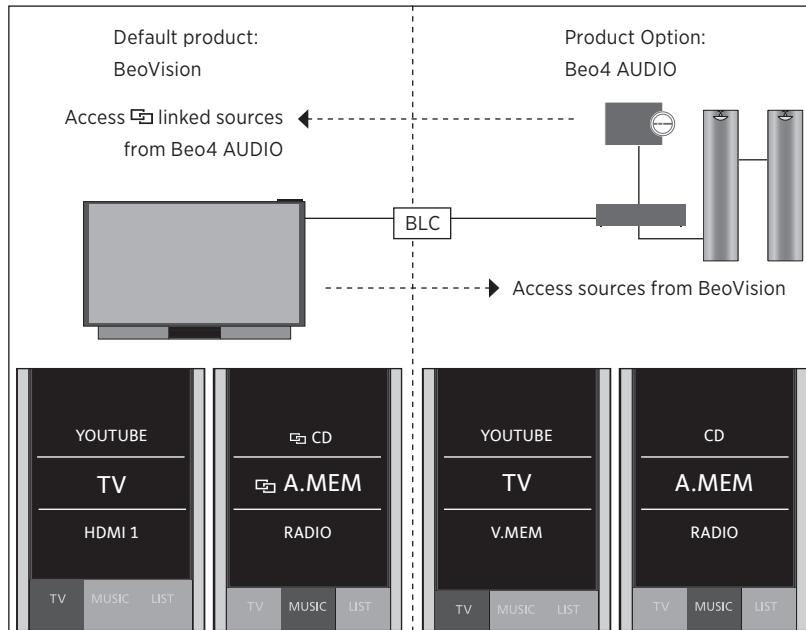

In this setup, the Network Link TV is BeoVision per default and the Master Link music system must be set up as Beo4 AUDIO. For information about how to set up your product, [see page 13](#) and [page 16](#).

You have a list of TV and MUSIC sources for each product type: BeoVision and Beo4 AUDIO.

To show/hide sources in BeoVision using BeoRemote One ...

- > The television is set up as BeoVision from the factory and BeoVision is selected in the BeoRemote One LIST.
- > Show or hide sources¹ of the television via the BeoRemote One LIST, [see page 9](#).
- > Show or hide linked sources, such as CD via the BeoRemote One LIST, [see page 9](#).

To Show/hide sources in Beo4 AUDIO ...

- > Select Beo4 AUDIO² in the BeoRemote One LIST.
- > Show or hide sources of the music system via the BeoRemote One LIST, [see page 9](#).
- > Show sources you can 'borrow' from BeoVision, such as YOUTUBE³ via the BeoRemote One LIST or hide sources, you do not need, [see page 9](#).

Example of how to listen to a TV source from BeoVision⁴ ...

Press to bring up the current product, such as BeoVision, in the BeoRemote One LIST



Select the desired product, for example, Beo4 AUDIO²



Press TV and select the source you want to 'borrow' from BeoVision, such as YOUTUBE³




¹*Note that available TV sources are shown in the SOURCE LIST menu of your television.

²*In this example BEO AUDIO is already added to the BeoRemote One LIST and the music system is set up as Beo4 AUDIO.

³*If the relevant source, such as YOUTUBE is not available in the BeoRemote One LIST, contact your retailer.

⁴*With Network Link you can access sound from sources of other products in the network. If you connect your television to a Master Link product, you must also use a BeoLink Converter NL/ML (BLC) to obtain the benefits of Network Link.

Two TVs with Network Link in separate rooms

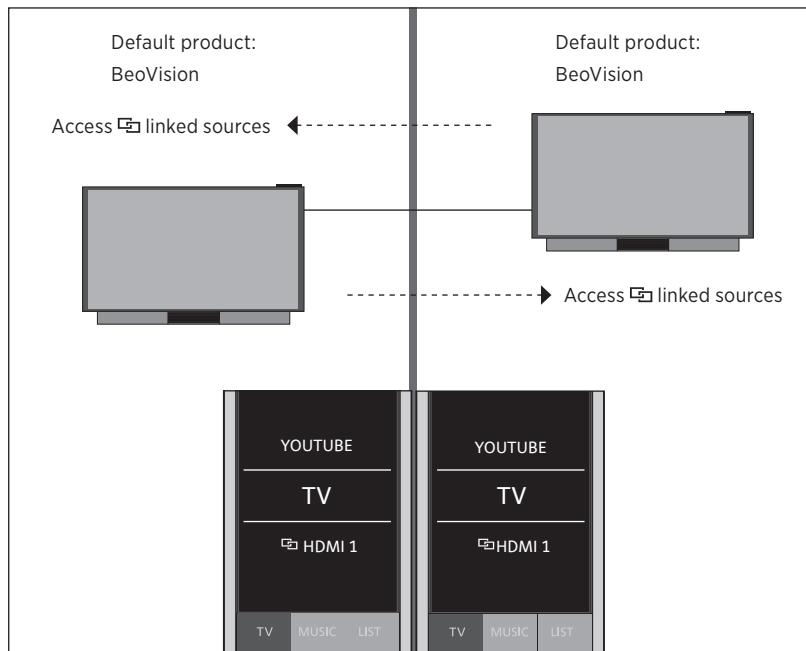

In this setup, both Network Link TVs are BeoVision per default.

You have the same list of **TV** and **MUSIC** sources for both televisions. In the example only the TV sources are shown.

To show/hide sources of both TVs using BeoRemote One ...

- > Both televisions are set up as BeoVision from the factory and BeoVision is selected in the BeoRemote One **LIST**.
- > Show or hide sources^{*1} of both televisions via the BeoRemote One **LIST**, [see page 9](#).
- > Show or hide linked sources, such as **HDMI 1** of both televisions via the BeoRemote One **LIST**, [see page 9](#).

Example of how to listen to a linked TV source^{*2} ...

Press **TV** and select a linked source, such as **HDMI 1**




^{*1}Note that available TV sources are shown in the **SOURCE LIST** menu of your television.

^{*2}* With Network Link you can access sound from sources of other products in the network.

Note! If a Network Link product is intended for operation with Beo4, you must set it up as a 'Beo4' product instead. For more information, [see pages 16-18](#).

Two TVs with Network Link in the same room (with one BeoRemote One)

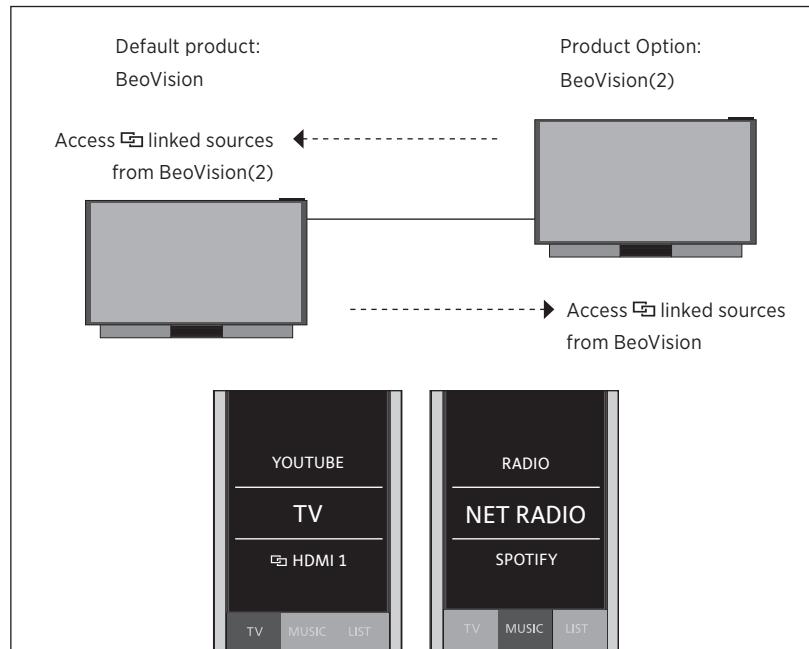

In this setup, one Network Link TV is BeoVision per default and the other is set up as BeoVision(2). For information about how to set up your product, [see page 13](#).

You have the same list of **TV** and **MUSIC** sources for both products BeoVision and BeoVision(2).

To show/hide sources of both TVs using BeoRemote One ...

- > Select BeoVision or **BeoVision(2)*1** in the BeoRemote One **LIST**.
- > Show or hide sources*2 of both televisions via the BeoRemote One **LIST**, [see page 9](#).
- > Show or hide linked sources, such as HDMI 1 of both televisions via the BeoRemote One **LIST**, [see page 9](#).

Example of how to listen to a linked TV source*3 ...

Press to bring up the current product, such as BeoVision, in the BeoRemote One LIST



Select the desired product, for example, BeoVision(2)*1



Press TV and select a linked source, such as HDMI 1



*1 In this example BeoVision(2) is already added to the BeoRemote One LIST and the TV is set up as BeoVision(2).

*2 Note that available TV sources are shown in the **SOURCE LIST** menu of your television.

*3 With Network Link you can access sound from sources of other products in the network.

Note! If a Network Link product is intended for operation with Beo4, you must set it up as a 'Beo4' product instead. For more information, [see pages 16-18](#).